

aspire™

QUICK-START GUIDE

To replace your atomizer unit:

When flavor and/or vapor is reduced, it is time to change out the atomizer. Remove the Atlantis Mega from battery, unscrew the base hardware from the tank, replace the used atomizer with a new one.



To fill your tank:

Turn tank upside-down, screw the base hardware off the tank, hold the tank at a 45 degree angle, then drip e-liquid into the space between the glass tank and the center metal tube. Screw the bottom base into the tank. Do not over-fill or get liquid into the small center hole.



To use the device:

Screw the Atlantis Mega with e-liquid into the battery, push the button on the battery (press 5 times in succession to turn ON/OFF), then press the button and inhale at the same time.



Rotate the rotary knob at the bottom of the battery to deliver the optimal wattage for vaping needs.



When using a new atomizer, let the tank stand for 2-5 minutes, so the cotton can be saturated with juice before firing. Do not let the tank become completely empty. Refill the tank to avoid dry burning or damage to the atomizer.

aspire™

QUICK-START GUIDE



Drip tip



Tank



Replaceable Atomizer



Bottom hardware



There is a new cooling system on the top of the tank, with which you can adjust the temperature of vapor by rotating the valve to control the access of external cool air.

CHARGING INSTRUCTIONS:

1. Unscrew the battery from the vaping components.
2. Gently screw battery into the USB charger.
3. Plug the USB into the supplied wall charger or computer.
4. The light on the USB charger will be red when charging.
5. Once fully charged, the USB charger will display a green light, and the LED light on battery will turn off.

