aspine*

QUICK-START GUIDE

To replace your atomizer unit:

When flavor and/or vapor is reduced it is time to change out the atomizer. Remove the Atlantis from battery. unscrew the base hardware from the tank, replace the used atomizer with a new one.

To fill your tank:

Turn tank upside-down, screw the base hardware off the tank, hold the tank at a 45 degree angle, then drip e-liquid into the space between the glass tank and the center metal tube Screw the bottom base into the tank. Do not over-fill or get liquid into the small center hole

To use the device:

Screw the Atlantis with e-liquid into the battery, push the button on the battery (press 5 times in succession to turn ON/OFF), then press the button and inhale at the same time.







When using a new atomizer, let the tank stand for 2~5 minutes, so the cotton can be saturated with juice before firing. Do not let the tank become completely empty. Refill the tank to avoid dry burning or damage to the atomizer.



Drip tip

Replacement Tank

Bottom hardware

QUICK-START GUIDE

CHARGING INSTRUCTIONS:

- 1. Unscrew the battery from the vaping components.
- 2. Gently screw battery into the USB charger.
- 3. Plug the USB into the supplied wall charger or computer.
- 4. The light on the USB charger will be red when charging.
- 5. Once fully charged, the USB charger will display a green light, and the LED light on battery will turn off.



Replace the hollowed-out tank:

Screw the replaceable atomizer into bottom hardware, then screw the whole base hardware into the hollowed-out tank, finally insert the drip tip into the tank.