

aspire™
LIFE CHANGING

US PATENT: 14098513
EU PATENT: 13197614.4
CN PATENT: 201330544655.1
DESIGNED AND MANUFACTURED BY
EIGATE TECHNOLOGY
www.aspirecig.com

Copyright © All right reserved



USER MANUAL FOR
Mini Nautilus



Mini Nautilus

Thank you for your purchase of the Aspire Mini Nautilus tank system.

Before using the Mini Nautilus, please read through the manual for proper care and use. This will insure continued enjoyment of your Mini Nautilus tank system.

Please keep this manual for future reference.

The Mini Nautilus is the next generation of tank systems. Made of stainless steel and Pyrex glass, the Mini Nautilus uses the Aspire “BVC” (Bottom Vertical Coil) atomizer technology. This new technology is designed to last longer while still giving users the purest and cleanest taste from e-liquids. The Mini Nautilus includes an improved four-port adjustable airflow system that is both user friendly and reliable. This unique four-port system allows the user to adjust the draw, warmth of vapor, and amount of vapor produced. The Mini Nautilus design also makes it easy to carry, install, and refill.

Aspire... the trusted name in Personal Vaporizers.

 
Configuration



Contents of kit:

- * 1 2ml Mini Nautilus Tank (1.6 ohm BVC atomizer pre-installed)
- * 1 replacement BVC atomizer (1.8 ohm)
- * 1 eGo threaded cone
- * 1 user manual

Mini Nautilus Expanded View

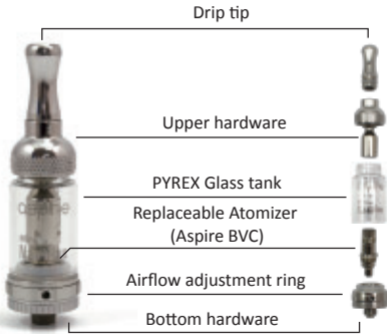

How to Assemble

1. Screw the upper hardware to the Pyrex tank (DO NOT over tighten!).



2. Screw the BVC Atomizer into the bottom hardware (make sure the BVC atomizer is snugged down hand tight).



How to Assemble



3. Snugly screw the Tank hardware to the bottom Atomizer hardware (the atomizer screws onto the air-tube shaft in the center).



4. Insert the drip-tip into the upper hardware.

How to fill liquid

1. Check to make sure the upper stainless steel component is screwed tightly onto the glass tank.



2. Unscrew the bottom hardware from the upper hardware.



How to fill liquid



When you unscrew the bottom hardware, the atomizer should be unscrewed from the upper hardware at the same time. In some cases, the atomizer will remain attached to the air-tube shaft in the center. If this happens, please unscrew the atomizer from the upper hardware and screw it back into the bottom hardware.

How to fill liquid

3. Fill liquid into the space between the glass tank and the center metal tube. DO NOT over fill or get liquid into the center shaft.



4. Screw the bottom hardware back onto the upper hardware.

 


How to fill liquid



- A: Don't fill the liquid into the central hole.
- B: Let the Mini Nautilus stand for **2 minutes** before use—this will allow e-liquid to absorb into the atomizer chamber.
- C: For use with eGo batteries: screw the eGo threaded cone onto the battery, and then install the Mini Nautilus onto the battery.
- D: If you experience a burning taste during the first couple of puffs, it is because the liquid has not fully absorbed into the atomizer. Please give the liquid time to fully absorb and try again.

How to adjust the airflow

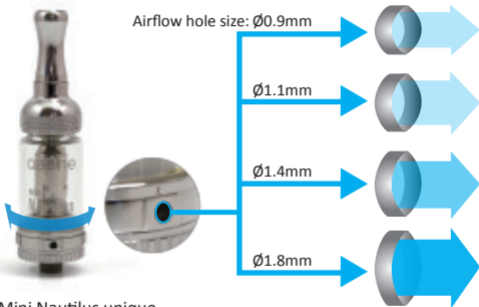

The Mini Nautilus unique four-port airflow valve features 4 different sizes to control the airflow of your tank. Rotate the Airflow control valve to your desired port size.

How to clean & notices

When necessary, clean the components (except the BVC Atomizer) by washing with clean water, and air-drying.

NOTICES

1. The glass tank should not be impacted, dropped, or mishandled, otherwise the glass tube may be broken, and injury may occur.
2. When disassembling, please remove the bottom hardware first, and then screw off the glass tank.
3. Do not fill the Aspire Mini Nautilus over 2ml; when the liquid level is below 0.5ml, the tank should be refilled to avoid a burning taste.
4. If the bottom hardware is hard to screw off, please screw the upper hardware with the glass tank tighter. The bottom hardware will then be easier to unscrew.