 


正面

USER MANUAL

COOL FIRE I

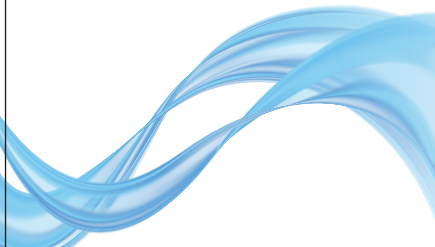

WARNING:
Please read the instructions and use precaution before using the Cool Fire I .

- 1.The Cool Fire I is intended for use by people of legal age (18+), NOT by non-smokers, children, pregnant or breastfeeding women, people with or at risk of heart disease, or people taking medication for depression or asthma. The Cool Fire I is neither intended for, or marketed as a quit smoking aid or cessation device.
2. This unit may include small parts, please keep out of reach of children and pets.
- 3.Don't abuse your Cool Fire I even though it's made of metal, you may damage it by dropping it.
- 4.Don't attempt to repair the unit by yourself as damage or personal injury may occur.
- 5.We recommend you use IMR high drain 18350 (without protection, maximum current output is more than 5000mA) any other types of batteries may damage your Cool Fire I .
- 6.In order to guarantee the normal function of Cool Fire I and the effect of vaping, we suggest that you charge your batteries when they are below 10% power.
- 7.In order to prolong the function of your Cool

Fire I, please do not place it in excessively hot or cold environments.

- 8.Please obey local laws or regulations while vaping. If there are any bans or potential dangers, please keep your Cool Fire I off.
- 9.Your Cool Fire I is not waterproof, please keep it dry.
- 10.Keep your Cool Fire I from sources of excessive heat.
- 11.Please don't drop, throw or abuse your Cool Fire I, you may cause damage to the outer shell or Inner components.
- 12.Please don't insert the battery backwards; no vapor will be produced.
- 13.Innokin is not responsible for battery explosions due to the use of low quality battery; Innokin Cool Fire I kit doesn't come with any batteries and charger .

Warranty

Please consult with Innokin official distributors for their warranty and return policy. Innokin's warranty does not apply to products purchased through third party vendors.

 
Main Features:

- Supports 18350 batteries - maximum current output is more than 5000mA.
- Rated power of 8.5W, which is perfectly suitable for 2.0 ohm iClear dual coil clearomizers.
- Reverse Battery Protection Circuit.
- Built in 7A fuse for protection and stability.
- Short Circuit Protection.
- ON/OFF battery switch.
- LED Battery Power Display.
- Low Voltage Warning.

iClear dual coil clearomizer

ON/OFF Power button:

The bottom cover

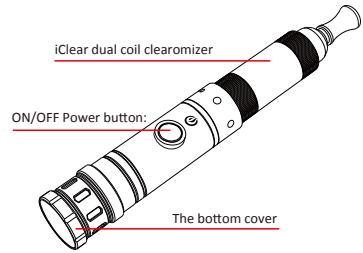

➤ Supports 18350 batteries - maximum current output is more than 5000mA.

➤ Rated power of 8.5W, which is perfectly suitable for 2.0 ohm iClear dual coil clearomizers.

➤ Reverse Battery Protection Circuit.

➤ Built in 7A fuse for protection and stability.

➤ Short Circuit Protection.

➤ ON/OFF battery switch.

➤ LED Battery Power Display.

➤ Low Voltage Warning.

反面

- Overtime Vaping Warning (10 second switch cutoff).
- Battery safety protection (Vent holes).
- High compatibility 510 connector: Will fit iClear16, and iClear30 dual coil clearomizers, as well as standard 510 accessories

OPERATION GUIDE

When a battery is installed, the LED light will blink from red to yellow to green the Cool Fire I will be in off mode.

“ⓘ” button: ON/OFF battery switch.
Quickly clicking it three times will enable or disable the battery. Once enabled, holding down the button will activate the battery. This safety feature prevents the atomizer from turning on while it's in your pocket or bag and it prevents any settings from getting changed without your knowledge.


ON Mode
Quickly clicking the “ⓘ” button three times will turn the Cool Fire I on; your LED light will blink from red to yellow to green; Once turned

on, holding down the “ⓘ” button will fire the device.

OFF Mode


Quickly clicking “ⓘ” button three times turns the device off.

 PRESS 3x



Battery Capacity Display

The LED lights will show green, yellow or red to indicate whether there is full battery life, half capacity or charging needed.








LED Light Blinking Mode:

The LED light will blink different colors to indicate the current battery voltage.

1. Red LED light = battery voltage is lower than 3.6V
2. Yellow LED light = battery voltage = 3.6V-3.75V
3. Green LED light = battery voltage higher than 3.75V
4. The Red LED will keep blinking for 8 seconds when battery capacity is lower than 3.3V, none output ,3 consecutive alarm enter OFF mode.
5. The Red LED light will stay lit for 5 seconds when a load short circuit is detected, then no vapor will be produced and when you press the ⓘ button.
6. 10 seconds cutoff: If the “ⓘ” button is held down for 10 seconds or longer, LED blinks 10 times then goes off , the Cool Fire will shut itself off until the button is released and pressed again.

Notes:

Replace the atomizer if vapor volume decreases, or refill when the liquid levels are low. The manufacturer is not responsible for a damaged atomizer, cartomizer or clearomizer. Never use your Cool Fire I without an atomizer, cartomizer or clearomizer. Please consult your atomizer documentation for proper usage instructions. Use the Cool Fire I only as intended.



COOL FIRE I 说明书(四折页)
成品尺寸：57mm x 95mm
颜色：四色印刷
材质：128g双铜版纸正反两面印刷