

3.Do not intentionally abuse, damage, drop, or place in water. 4.Do not disassemble the device.

5. This device is intended for recreational purposes only and is not a smoking

6. If you have any questions, please contact us via www.teslacigs.com.







"Low Battery." Please recharge the device.

3. No Atomizer Protection: If no atomizer is attached to the device, the screen will display. "No Atomizer."

4. Atomizer Short Protection: Device has internal controls to protect against atomizer.


egular coil, resistance below 0.1ol

With Ti/Ni/SS316 coil, resistance below 0.05ohm.

5. Automatic Power Adjust Protection: Using this device under high wattage situations when the battery is at low voltage/power conditions, the battery sign will flash continuously and will auto adjust the output wattage power to be used in safe normal models.

12

10

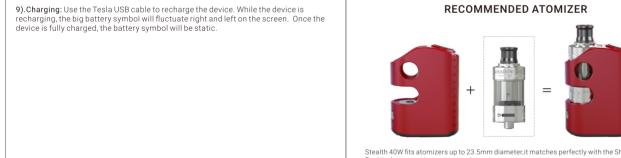





7).Adjust Power Option: When device Agust Power Uption: When device is powered on, press the up/down button to adjust wattage accordingly. Wattage will move in .5 increments. Press and hold up or down button to adjust wattage rapidly.
 Bypass Mode: Select wattage to 40W, press the up button once more to switch device to Bypass Mode (Mechanical Mode).



11

09

13

1). Power On: Press the fire button 5 times continuously to turn on the device.
2). Power Off: Press the fire button 5 times continuously to turn off the device.
3). Vaping: Long press the fire button to get a puff, loosen the button to stop puff.
4). Power Lock/Unlock: Hold down both fire button and down button to lock/unlock your device.

| Power Lock/Unlock: Hold down both fire button and up button to lock/unlock to the public state of the 5). Resistance Lock/Unlock: Hold down both fire button and up button to lock/unlock the coil resistance. When the lock sign displayed, thus the resistance is locked. (Note: Such operation should be carried out at room temperature.)

(Note: Such operation should be carried out at room temperature.)

FESTIANCE LINE LOCK IT.

6). Select Ti/Ni/SS/Normal Mode: Attach a temp control coil to the device and press the fire button. The screen will prompt "Temp Coil Select." Choose the appropriate coil type using the up/down buttons. For a new coil, press the up button. If you disconnect and reconnect the same atomizer coil, then select the down button. After the coil type is selected, press the fire button.



06

